

# How to:



## How to Operate a Rotary Floor Machine

### Basic Pointers.

- Always wear shoes (overshoes are best) while operating floor machine
- Keep feet slightly apart with one foot in front of the other.
- Make sure cable will not get tangled in the brush. Keep cable plugged in behind you.
- Report any malfunction or damage (i.e. Frayed cable) so it can be repaired.
- Keep hands on both handles. Steady machine by resting against you.
- Do not lock switch in “ON” position. This could cause an accident.
- Be sure cable is plugged in behind the operator and remains in a safe position while using machine.
- Select the right pad for the job.\*
- Use rotary machine for: stripping, scrubbing, buffing, spray buffing, and carpet shampooing.

### How to Mount the Brush or Pad Holder.

1. Lock handle in straight up position.
2. Lower handle to floor exposing the underside of the machine.
3. Place on drive lug 12 o'clock position.
4. Straddle machine with brush or pad holder in hand.
5. Place on clutch plate slot on brush or pad holder in 12 o'clock position.
6. Mount brush or pad holder on drive lug.
7. Twist brush.

### How to Adjust the Handle.

1. Loosen the handle lock.
2. Adjust handle to groin.
3. Lock handle into position.

### How to Mount the Brush or Pad Holder.

1. Mount brush or pad holder and adjust handle.
2. Rest machine handle against you.
3. Turn on machine.
4. Hold on both handles.
5. To move machine to the right, raise the hands slightly (R-R)
6. To move machine to the left, lower the hands slightly (L-L)